

AKE-5 Code Types		
Code Type	User Type	Function
<b>Master User Code</b> 1 Changeable Code, 3 – 8 Digits Long Factory Default: 1 3 5 7 9	Vehicle Owner, Operator, or Manager	- Vehicle Entry & Auxiliary Output Control - Add, Change, Delete Optional User Codes
<b>Optional User Codes</b> 5 Changeable Codes, 3 – 8 Digits Long	Family Member, Friend, Mechanic, Valet, Authorized Vehicle Operator	- Vehicle Entry & Auxiliary Output Control
<b>Lock Code</b> 3 Non Changeable Codes - Lock Code 559 - Lock Code 557 - Lock Code 555	Everyone	- 559 -Locks Door, Arms Alarm, Arms Keypad, Cancels 3-Digit Convenience Code Mode - 557 – Locks Door, Arms Alarm, Cancels 3-Digit Convenience Code Mode - 555 – Locks Door, Activates 3-Digit Convenience Code (if enabled)

AKE-5 Code Programming Commands	
Code Type	Commands
<b>Master User Code</b>  <div style="border: 1px solid black; padding: 5px; width: fit-content;">Where is the Programming Switch Installed?</div>  <div style="border: 1px solid black; padding: 5px; width: fit-content;">What is my Master User Code?</div>	<b>To Change The Master User Code</b> <ol style="list-style-type: none"> <li>1. Locate and press the Programming Switch</li> <li>2. 4 Rapid Beeps 📞 will sound</li> <li>3. Enter 1119 on the keypad</li> <li>4. 3 Rapid Beeps 📞 will sound</li> <li>5. Enter the new 3 – 8 Digit Master User Code within 5 seconds</li> <li>6. Wait 5 seconds for 3 Rapid Beeps 📞</li> <li>7. Test the new Master User Code</li> <li>8. If the new code does not work, repeat Steps 1. – 7.</li> </ol>
<b>! Caution !</b>	
<b>Make sure you have door keys or leave a window open before testing the new Master User Code!</b>	
Code Type & Memory Location	Commands
Optional User Code 111 Optional User Code 113 Optional User Code 115 Optional User Code 117 Optional User Code 119	<b>To Add or Change an Optional User Code</b> <ol style="list-style-type: none"> <li>1. Enter the Master User Code on the keypad</li> <li>2. Enter the Optional User Code Memory Location Number</li> <li>3. Example: 111</li> <li>4. 3 Rapid Beeps 📞 will sound (command accept)</li> <li>5. Enter the new 3 – 8 Digit Optional Use Code</li> <li>6. Wait 5 seconds for 3 Rapid Beeps) (system reset)</li> <li>7. Test the new Optional User Code</li> <li>8. If the new code does not work, repeat Steps 1. – 7.</li> <li>9. Repeat Steps 1. – 7. to add additional Optional Users</li> </ol>
Optional User Code 111 Optional User Code 113 Optional User Code 115 Optional User Code 117 Optional User Code 119	<b>To Delete an Optional User Code</b> <ol style="list-style-type: none"> <li>1. Enter the Master User Code on the keypad</li> <li>2. Enter the Optional User Code Memory Location #</li> <li>3. 3 Rapid Beeps 📞 will sound (command accept)</li> <li>4. Wait 5 seconds for 3 Rapid Beeps 📞 (system reset)</li> <li>5. Test the deleted Optional User Code</li> <li>6. If the deleted code still works, repeat Steps 1. – 4.</li> </ol>
<b>CAN'T START CODE WITH #5</b>	<b>Note:</b> One Long Beep indicates an error – allow the system to reset - 2 Rapid Beeps 📞 - then proceed to re-enter the required commands

**\*Removal of the manufacturer's date code label will void the warranty!**

The AKE-Series is covered by a 3 year limited warranty against defects in materials and workmanship. Essex Electronics disclaims any and all damages or injuries that may result from the installation or use of this product.