

AKE-5 Quick Install Guide

The Worry-Free Keyless Entry® System

- 1. Remove door panel and adjacent kick panel to locate power source and control or relay interface points.
- 2. Measure available power levels under load for sufficient current.


Note: The AKE-5 requires 60mA at 10 Volts DC minimum (make sure the power source you select does not drop below 10 Volts when actuating the door locks, lights, or other power accessories).

- **3.** Pre install system. Connect to power and connect to control points and test required functions prior to physical installation.
- **4.** Pre select keypad installation location and inspect for proper internal door clearances, customer ease of use and best appearance.
- 5. If required splice, solder and heat shrink longer cable harness to required control points.
- 6. Using Essex template make cut-out.
- 7. Apply generous amount of rust inhibitor to holes.
- 8. Install the keypad and make all terminations.

Continue to Open Keypad Holes with Unibit Drill Bit to 9/16"

8. Remove Tape and Apply Liberal Amount of Rust Inhibitor Around Holes

- 9. Install the program switch in a hidden but accessible location.
- 10. Retest for proper system operation.
- 11. Change Factory Default Master User Code. Default Code: 1 3 5 7 9
 TIP: Use the customer's phone number as the code.
- 12. Make any additional required programming changes.
- 13. Verify keypad to control point cable harness is free from interference with window up/down operation and side impact bags if present. Use cable ties to secure unobstructed cable path.
- 14. Apply keypad overlay.
- 15. Replace all panels.
- **16.** Place User Guide in glove box after writing in Programming Switch Location and Master User Code in provided spaces (also on User Code Guide Sheet).

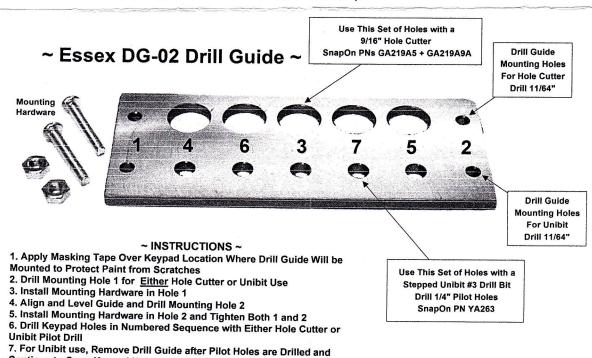

*Removal of the manufacturer's date code label will void the warranty!

The AKE-Series is covered by a 3 year limited warranty against defects in materials and workmanship. Essex Electronics disclaims any and all damages or injuries that may result from the installation or use of this product.

AKE-5-QIG - Revision E-7-22-11