

KE-1701-RK Code Types		
Code Type	User Type	Function
Master User Code 1 Changeable Code, 3 – 8 Digits Long Factory Default: 1 3 5 7 9	Vehicle Owner, Operator, or Manager	- Vehicle Entry & Auxiliary Output Control - Add, Change, Delete Optional User Codes
Optional User Codes 5 Changeable Codes, 3 – 8 Digits Long	Family Member, Friend, Mechanic, Valet, Authorized Vehicle Operator	- Vehicle Entry & Auxiliary Output Control
Lock Code 3 Non Changeable Codes - Lock Code 559 - Lock Code 557 - Lock Code 555	Everyone	- 559 -Locks Door, Arms Cable, Arms Keypad, Cancels 3-Digit Convenience Code Mode - 557 – Locks Door, Arms Cable, Cancels 3-Digit Convenience Code Mode - 555 – Locks Door, Activates 3-Digit Convenience Code (if enabled)

KE-1701-RK Code Programming Commands	
Code Type	Commands
Master User Code <div style="border: 1px solid black; padding: 5px; margin: 5px 0;">Where is the Programming Switch Installed?</div> <div style="border: 1px solid black; padding: 5px; margin: 5px 0;">What is my Master User Code?</div>	To Change The Master User Code 1. Locate and press the Programming Switch 2. 4 Rapid Beeps 🗲 will sound 3. Enter 1119 on the keypad 4. 3 Rapid Beeps 🗲 will sound 5. Enter the new 3 – 8 Digit Master User Code within 5 seconds 6. Wait 5 seconds for 3 Rapid Beeps 🗲 7. Test the new Master User Code 8. If the new code does not work, repeat Steps 1. – 7.

! Caution !
Make sure you have door keys or leave a window open before testing the new Master User Code!

Code Type & Memory Location	Commands
Optional User Code 111 Optional User Code 113 Optional User Code 115 Optional User Code 117 Optional User Code 119	To Add or Change an Optional User Code 1. Enter the Master User Code on the keypad 2. Enter the Optional User Code Memory Location Number 3. 3 Rapid Beeps 🗲 will sound (command accept) 4. Enter the new 3 – 8 Digit Optional Use Code 5. 3 Rapid Beeps 🗲 will sound (command accept) 6. Wait 5 seconds for 3 Rapid Beeps)) (system reset) 7. Test the new Optional User Code 8. If the new code does not work, repeat Steps 1. – 7. 9. Repeat Steps 1. – 7. to add additional Optional Users
Optional User Code 111 Optional User Code 113 Optional User Code 115 Optional User Code 117 Optional User Code 119	To Delete an Optional User Code 1. Enter the Master User Code on the keypad 2. Enter the Optional User Code Memory Location # 3. Wait 5 seconds for 3 Rapid Beeps 🗲 (system reset) 4. Test the deleted Optional User Code 5. If the deleted code still works, repeat Steps 1. – 4.
Can't Start Code with #5	Note: One Long Beep indicates an error – allow the system to reset - 2 Rapid Beeps 🗲 - then proceed to re-enter the required commands

KE-1701-RK REV B- 7-20-11

***Removal of the manufacturer's date code label will void the warranty!** The 1700 Series is covered by a 3 year limited warranty against defects in materials and workmanship. Essex Electronics disclaims any and all damages or injuries that may result from the installation or use of this product.

KE-1701-RK System Setup Programming Commands	
Setup	Commands
Change 3/4 Key Function	<p>Change Auxiliary Output 3/4 to Toggle ON/OFF</p> <ol style="list-style-type: none"> 1. Locate and Press the Programming Switch 2. 4 Rapid Beeps 🔔 will sound (command accept) 3. Enter 1113 on the keypad 4. 2 Rapid Beeps 🔔 will sound (system reset) 5. Enter 1 to enable 3/4 Key Output to Toggle ON/OFF 6. 4 Rapid Beeps 🔔 indicates successful mode change Note: 1 long beep indicates error - press 1 again 7. Test: by entering a valid unlock code followed by pressing the 3/4 Key within 5 seconds of the last key press. <p>Change Auxiliary Output 3/4 to Momentary</p> <ol style="list-style-type: none"> 8. Repeat Steps 1. – 5. 9. Enter 9 to enable momentary mode (1 second) (default) 10. Feedback: 4 beeps indicates successful mode change Note: 1 long beep indicates error - press 1 again 11. Test: by entering a valid unlock code followed by pressing the 3/4 Key within 5 seconds of the last key press. <p>Note: When either programming command is successfully completed the system will automatically restart to accept and activate the new system setup parameters. On restart the toggle auxiliary Output 3/4 (press the 3/4 Key) will be in the resting, inactive, or OFF state and the alarm output will be ON or armed.</p>
Convenience Codes	<p>Enable 3-Digit Convenience Codes</p> <ol style="list-style-type: none"> 1. Locate and Press the Programming Switch 2. 4 Rapid Beeps 🔔 will sound 3. Enter 1115 on the keypad 4. 2 Rapid Beeps 🔔 will sound 5. Enter 1 to Enable Convenience Code Mode 6. 4 Rapid Beeps 🔔 indicates successful mode change Note: 1 long beep indicates error - press 1 again 7. Add an Optional User Test Code of more than 3 digits long – example: 97531 8. Test: by entering lock code 555 followed by entering the test code. 975 should unlock the door. If not, repeat the programming steps. 9. Delete the Optional User Test Code. <p>Disable 3-Digit Convenience Codes</p> <ol style="list-style-type: none"> 10. Repeat Steps 1. – 4. 11. Enter 9 to Disable Convenience Code Mode 12. 4 Rapid Beeps 🔔 indicates successful mode change Note: 1 long beep indicates error - press 9 again 13. Test: Enter Lock Code 555 followed by a valid User Code longer than 3-Digits. The full length code should be required to unlock the vehicle. If not, repeat the programming steps. <p>Note: One Long Beep indicates an error – allow the system to reset - 2 Rapid Beeps 🔔 - then proceed to re-enter the required commands</p>