



- 1) Lock Code 559: Locks the Door, Arm Enabled, Arms the Keypad
Lock Code 557: Locks the Door and Arms the Alarm
Lock Code 555: Locks the Door and Activates 3 Digit Convenience Codes (if enabled)
- 2) Any Valid User Code Unlocks the Door and Arm Disabled.
- 3) Arm Enabled by Lock Codes 559 and 557
Arm Disabled by any valid User Code.

Patents Pending. Specifications Subject to Change Without Notice
Copyright © 2003 Essex Electronics, Inc. All Rights Reserved

Essex Electronics, Incorporated • 1130 Mark Avenue, Carpinteria, CA 93013 • (805) 684-7601 • FAX (805) 684-0232 • essex@keyless.com
Essex Electronics disclaims any and all damages or injuries that may result from the installation or use of this product