



***All Outputs are Grounding Outputs**

- 1) Lock Code 559: Locks the Door, Arm Enabled, Arms the Keypad
Lock Code 557: Locks the Door and Arm Enabled
Lock Code 555: Locks the Door and Activates 3 Digit Convenience Codes(if enabled)
- 2) Any Valid User Code Unlocks the Door and Arm Disabled.
- 3) Arm Enabled by Lock Codes 559 and 557
Arm Disabled by any valid User Code.

Patents Pending. Specifications Subject to Change Without Notice
Essex Electronics disclaims any and all damages or injuries that may result from the installation or use of this product
Essex Electronics, Incorporated 1130 Mark Avenue, Carpinteria, CA 93013
(805) 684-7601 • FAX (805) 684-0232 • essex@keyless.com
Copyright © 2010 Essex Electronics, Inc. All Rights Reserved
KE-1701-RK Wiring Diagram.RevA 082510

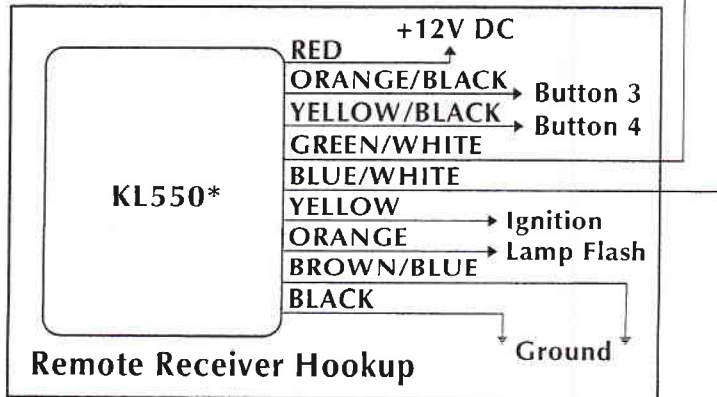

WIRING DIAGRAMS

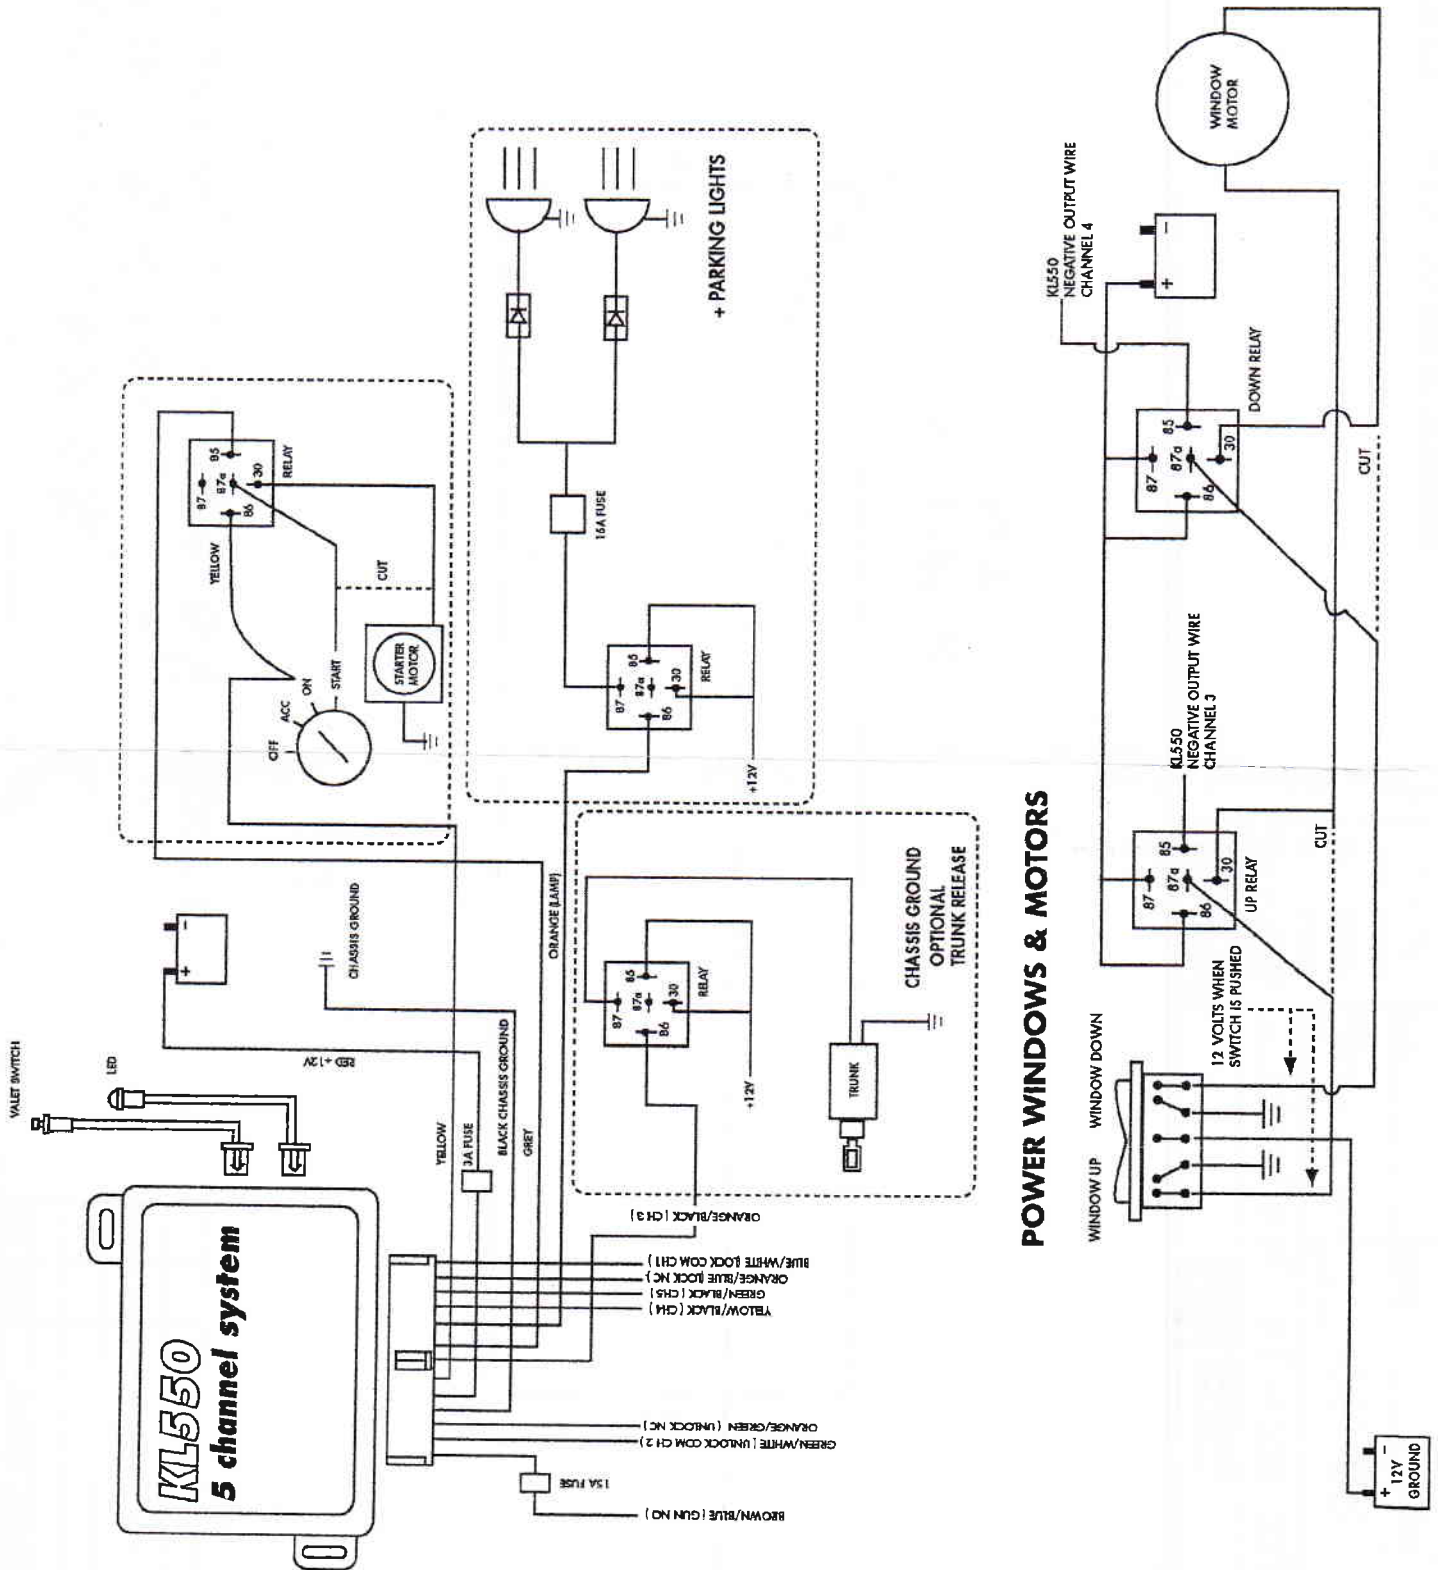

POWER WINDOWS & MOTORS

