~ Essex DG-02 Drill Guide ~

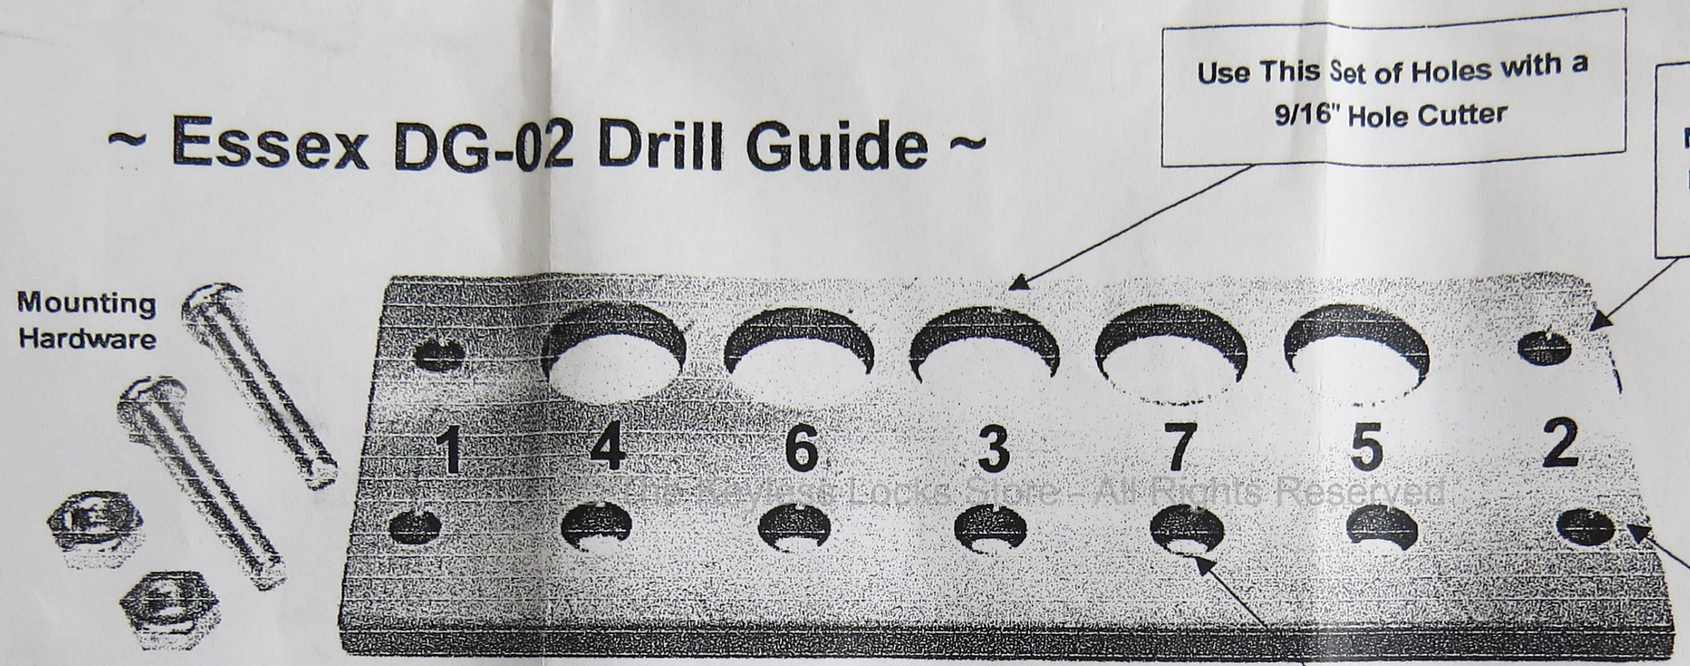

© The Keyless Locks Store - All Rights Reserved

~ INSTRUCTIONS ~

1. Apply Masking Tape Over Keypad Location Where Drill Guide Will be Mounted to Protect Paint from Scratches
2. Drill Mounting Hole 1 for Either Hole Cutter or Unibit Use
3. Install Mounting Hardware in Hole 1
4. Align and Level Guide and Drill Mounting Hole 2
5. Install Mounting Hardware in Hole 2 and Tighten Both 1 and 2
6. Drill Keypad Holes in Numbered Sequence with Either Hole Cutter or Unibit Pilot Drill
7. For Unibit use, Remove Drill Guide after Pilot Holes are Drilled and Continue to Open Keypad Holes with Unibit Drill Bit to 9/16"
8. Remove Tape and Apply Liberal Amount of Rust Inhibitor Around Holes

© The Keyless Locks Store - All Rights Reserved

www.KeylessEntryLocks.com