


# DIGITAL DOOR LOCK

**TEMPLATE FOR 2210  
WITH 25.4mm (1") THROW**

**IMPORTANT**

1. You must ensure that inside of 22mm (55/64") mortise hole is enlarged by moving wood drill up and down or using a small chisel – This is to give clearance for movement of 'CAM' which moves up as deadbolt is thrown (as shown in diagram below \*) – check clearance required by turning spindle in deadbolt and view movement of cam.

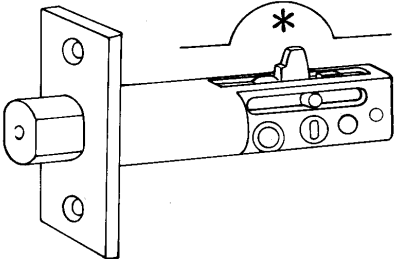

2. Ensure you drill hole in door frame deep enough to accept the 25.4mm (1") throw.

