Lockey M213 Installation Instructions

Parts List

NO.	Name of Parts	M213
1	Outside Body	1
2	Inside Body	1
3	Rubber Escutcheon	2
4	Mortised Strike	1
5	Spindle for 40-55 mm	1
6	Spindle for 30-45mm	1
7	Machine Screw M4 x 50mm for above 5	2
8	Machine Screw M4 x 35mm for above 6	2
9	Wood Screw M4 x 16	4
10	Key Tumbler (red)	1
11	Keyless Tumbler (blue)	2
12	Deadbolt (Adjustable)	1
13	Tweezers	1
14	Hexagonal Bolts	2
15	Brass Support Pin	1

Outside Body Diagram

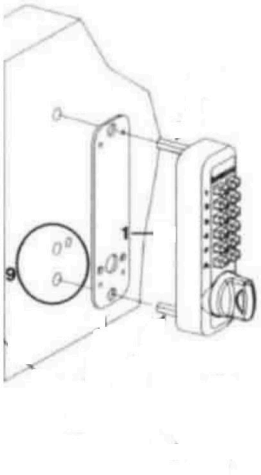

Inside Body Diagram

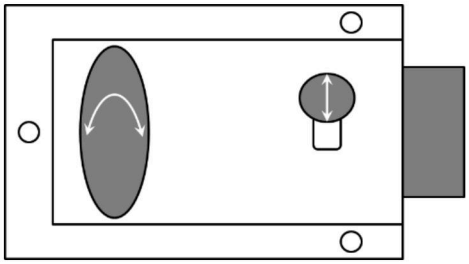

Instructions

1. Before installing, change your User Code, referencing the "How to Change Code" instructions.

2. Determine door handing. From the exterior of the door, a Right-Handed door will have hinges on the right side of the door and a Left-Handed will have hinges on the left side of the door. Change handing of lock as needed using included "M210" Instructions.

3. Using Inside Body template, determine and mark desired placement (trace outline of body) and mark "through" holes.

4. Drill through and spindle holes.

5. Determine correct spindle. There are two (2) spindles included, one for Right-Handed and one for Left-Handed configurations.

6. Ensure Hexagonal Bolts (#14) are attached to Outside Body.

7. Mount Outside Body on door, guiding spindle through the spindle hole and hexagonal bolts through the top and bottom through holes.

8. Secure Outside Body to door using included washers (2) and machine screws (2).

9. Mount Inside Body ensuring that the spindle is placed correctly and engages the lock.

10. Secure Inside Body to door using provided screws (3).

11. Test lock to ensure proper operation and correct handing.

PLEASE NOTE: You must secure Outside Body to door prior to mounting Inside Body.